

Instructions for use Measuring pole



Telescopic measuring rod used for measurement of internal holes in dimensions:

	Min.	Max.
3m	705 mm	3000 mm
5m	1040 mm	5000 mm
8m	1540 mm	8000 mm

Measurement Procedure:

When measuring slide out telescopic rod gradually from the smallest to the largest part of the telescope.

Each piece extends to provide the locking screw. Telescopic pull out slowly without the use of force.

Read the measured value in the sight glass enclosure measuring tape.

When inserting proceed from the largest to the smallest part of the telescope. Loosen the screw and, after insertion, tighten it again.

Telescopic slide slowly so he could wind up inside a measuring tape to prevent damage !!

IMPORTER: LEVIOR s.r.o.