

Pierceable cartridge heating torch

Item No.: 69931

Model No.: D2190



Instructions for use



Please read this manual carefully before use.

Read these instructions for use carefully so as to familiarize yourself with the appliance before connecting it to cartridge. Keep these instructions for future reference.

Specifications

Model:	D2190 piezo start
Type of gas:	butan
Appliance category:	vapour pressure butan
Cartridge:	gas, 190 g, EN 521
Consumption:	123 g/hod.
Nominal heat input:	1,7 kW

Do not use other types of gas cartridges only those meeting the EN 417 standard.

Important warning for use and maintenance of the heating torch

1. Use only in well-ventilated areas.
2. Do not modify appliance! The manufactory does not accept any responsibility for problems arising due to:
 - incorrect usage of the appliance
 - carelessness during usage of the appliance
 - fitting of wrong components (gas cartridge, spare parts, accessories)
3. Before inserting the gas cartridge reading the instructions printed on the gas cartridge.
4. Removing and fitting of the gas cartridge should be done outside.
5. Ensure the appliance is kept out of reach of children.
6. Do not use the appliance if the washer is in bad condition or damaged.
7. Do not use appliance if there are any gas leaks, if it is damaged or it is not working correctly.
8. In the case of gas leaks place the appliance outside away from flames and other inflammable sources or materials. Find the gas leak outside, use soapy water and never a naked flame.
9. Use this appliance always on a horizontal position and assure that the support surface of the appliance is horizontal. In this way you can obtain best performances, proper and safe flame, avoiding that an uncontrolled flame comes out from the burner. Do not shake the appliance before and during using.
10. The appliance has not been used near inflammable materials.
11. Ensure the knob of the gas tap is fully closed before inserting or replacing the gas cartridge.
12. An accessible part may become very hot. Keep children away from the appliance.


Cleaning and storage of the appliance

Before storing the appliance ensure the gas tap is fully closed and the appliance is cleaned carefully. This cleaning is particularly recommended if the appliance is not to be used for a long time.

Instructions for use

Insertion or replacement of the gas cartridge


1. Cartridge should be changed in outside, away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.
2. Check that the cartridge is empty before changing it (shake to hear the noise made by the liquid).
3. Close carefully the tap of the appliance.
4. Ensure that the pin washer is in perfect condition. If any distortion contact the service point.

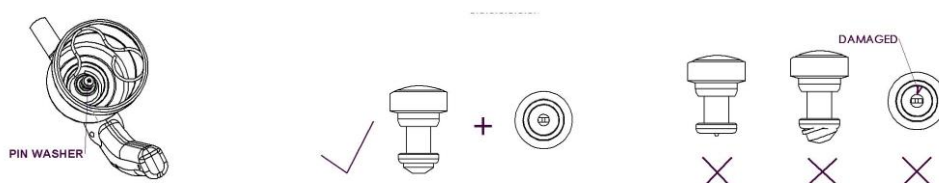

5. Never change a cartridge unless the appliance is shut off.
6. Check the seals before connecting a new cartridge to the appliance.
7. Twist off the cartridge holder and take out the empty cartridge.



8. Insert the gas cartridge and the steel support.

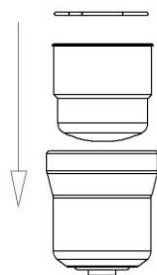

9. Twist onto the cartridge holder.


Lighting of the blowtorch

1. Ensure that there is no gas leakage.
2. Press the red button after the opening of the gas tap.
3. To regulate the intensity of the flame, slightly open or close the knob of the gas tap.
4. The phenomenon of flaring which may be occurred during warming up period or if the appliance is moved.

Shutdown of the blowtorch

To shut down the blowtorch the control knob of the gas have be fully closed. After using this appliance wait until the blowtorch cools down completely.

Adjust the rate

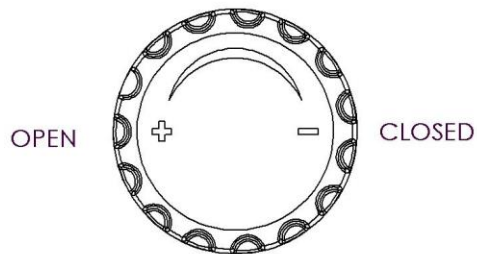

Service

In case assistance or maintenance is needed please contact your dealer or the nearest service point.